

### CONTROLS




COM1 and COM2 are the same type of port. Control and air curtain cables can be connected to either COM1 or COM2.

AIR CURTAIN 2 (SLAVE)



ADD UNITS 3, 4... UP TO 12


When multiple air curtains are connected to an only control, the last one must incorporate a Jumper in "END LINE" pins.

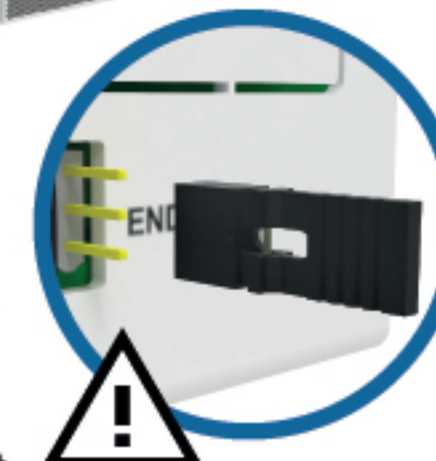

### POWER SUPPLY

#### ELECTRICAL HEATING


1. Open de service door

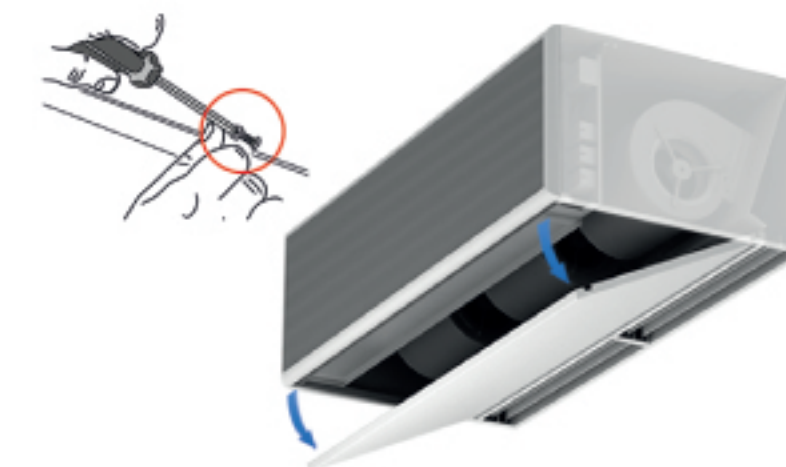


2. Pass the cable through the holtdown to the power terminal



3. Connect the cables at the electrical element as the picture shows:


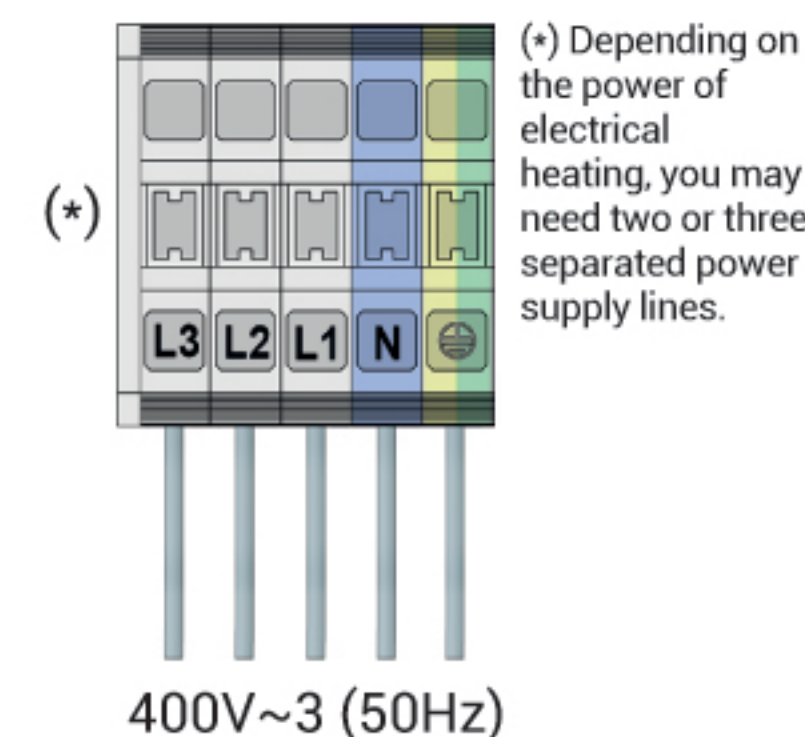


**4 PINS CONNECTOR RJ11**  
Are used for the connection to the control and also to the slaves air curtains connected

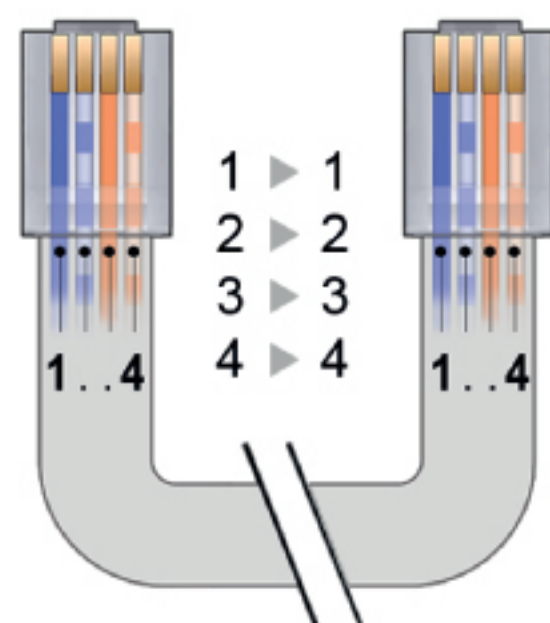

### ELECTRICAL ADDON

Electrical AddOn

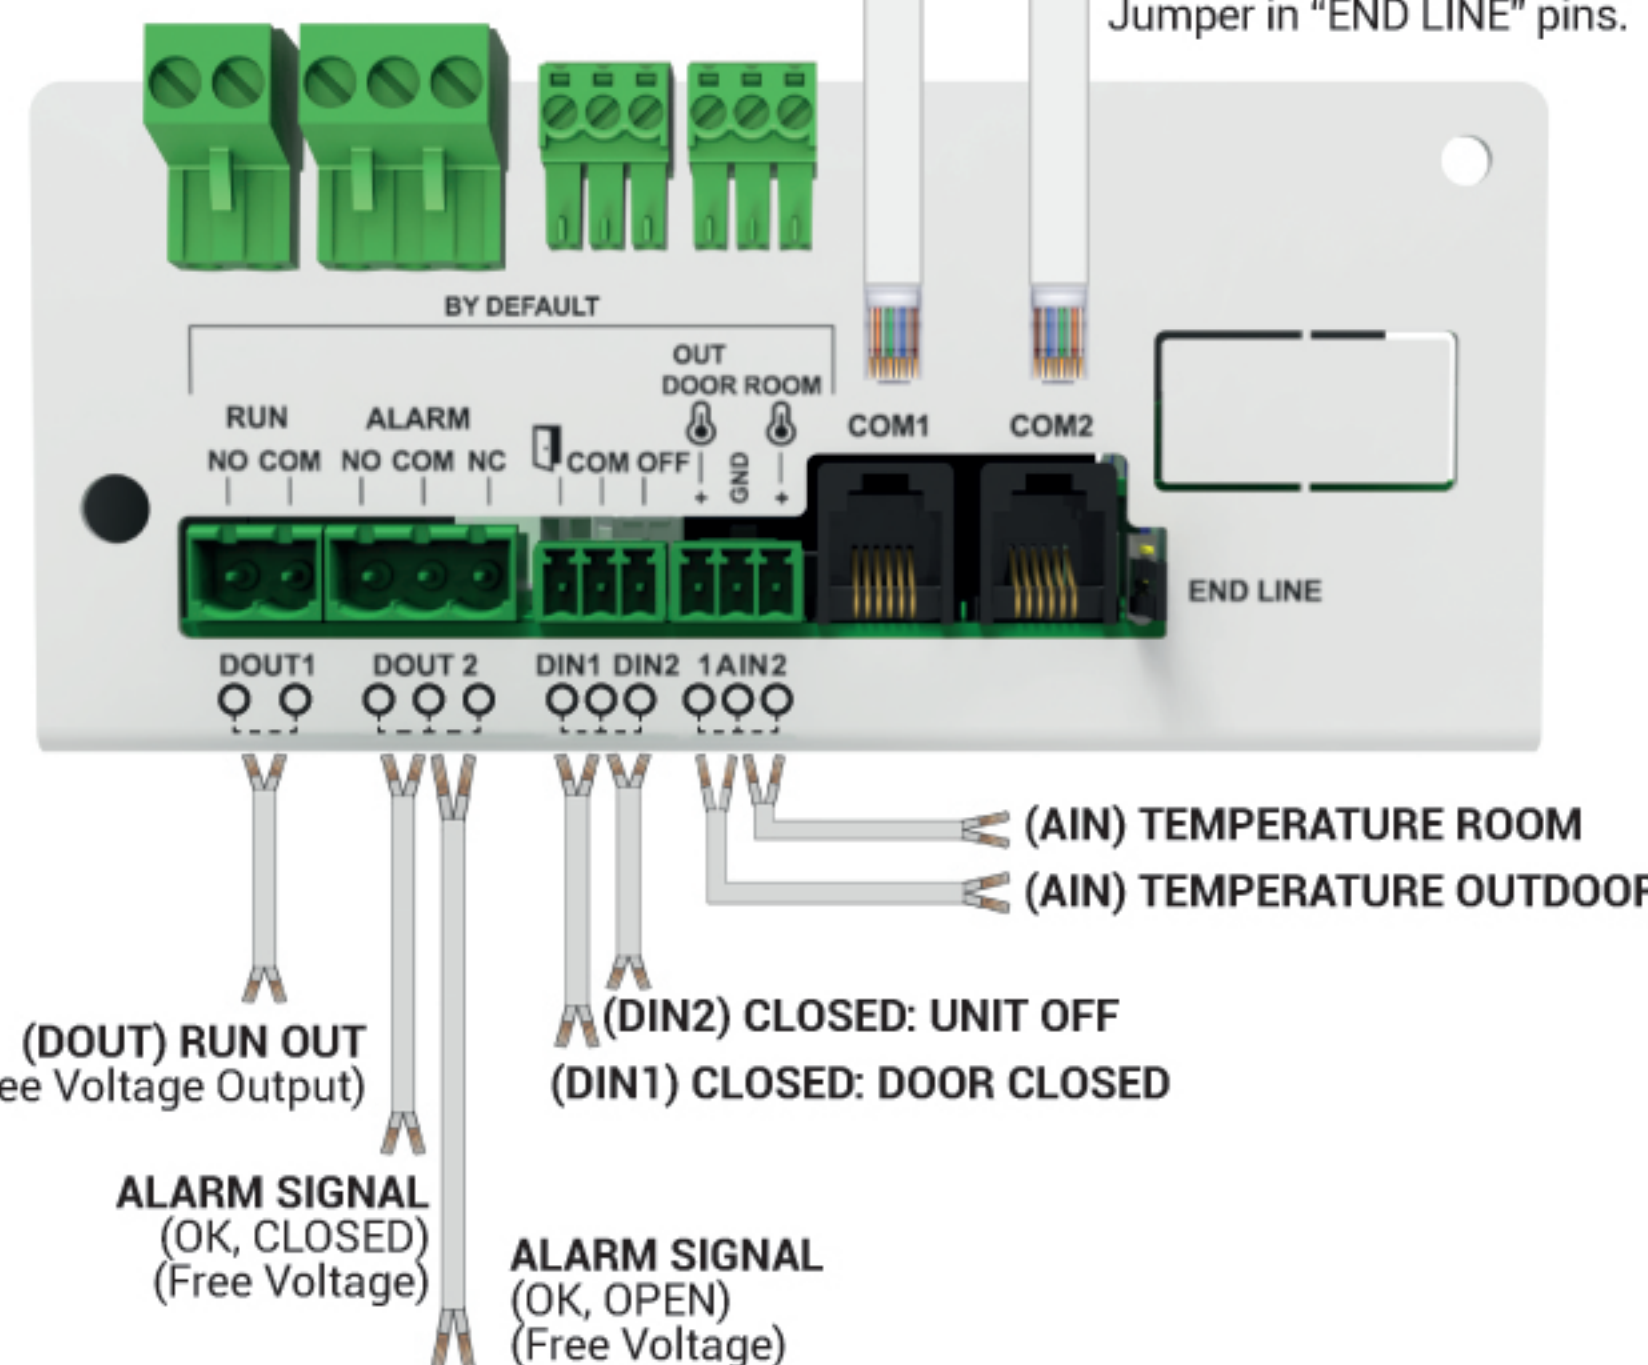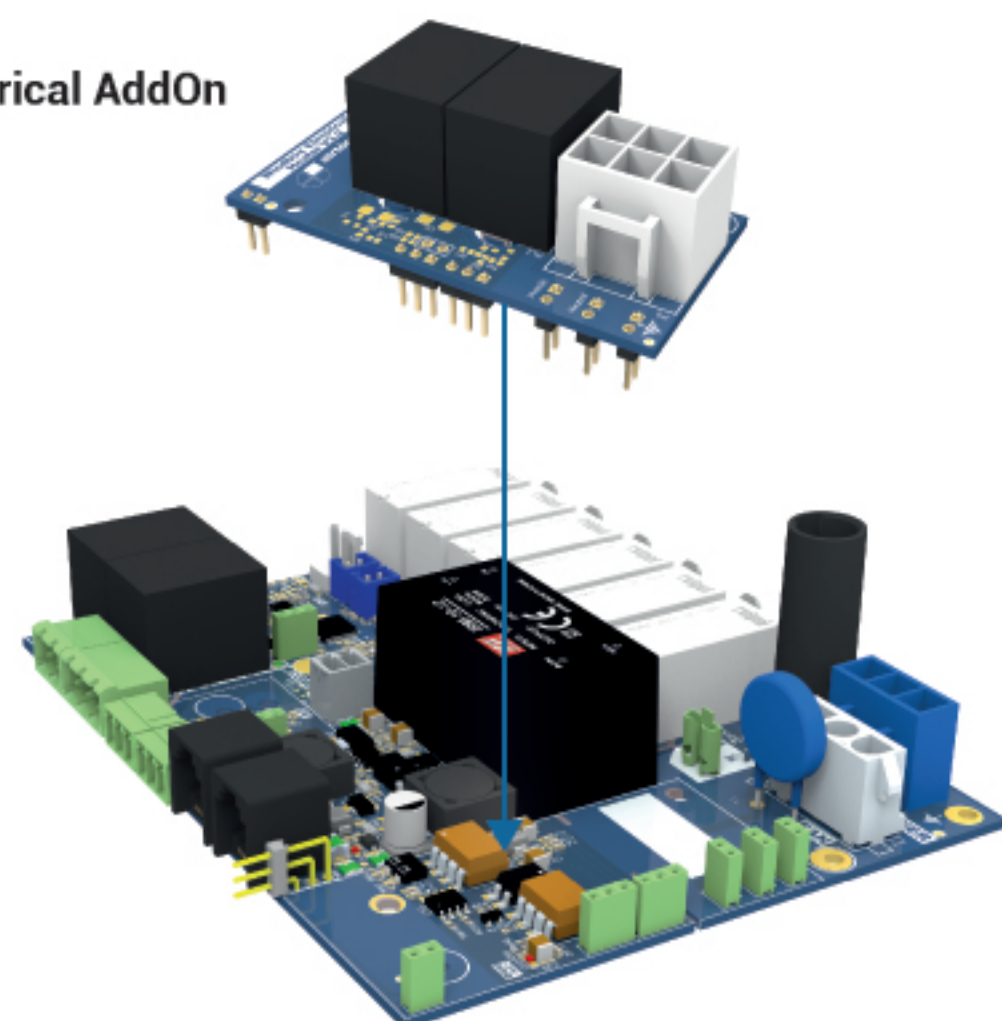

INTERNAL CONNECTION

AIR CURTAIN 1 (MASTER)