

CONTROLS



CLEVER PRO (optional)
ADVANCED PRO (standard)



COM1 and COM2 are the same type of port. Control and air curtain cables can be connected to either COM1 or COM2.




When multiple air curtains are connected to an only control, the last one must incorporate a Jumper in "END LINE" pins.



ADD UNITS 3, 4
... UP TO 12



4 PINS CONNECTOR RJ11

Are used for the connection to the control and also to the slaves air curtains connected

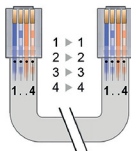

OPTIONAL VALVES:

Electrical AddOn

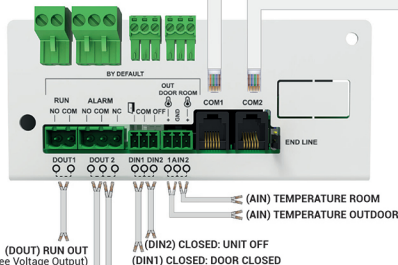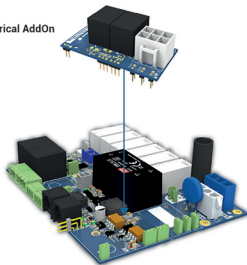

ALARM SIGNAL
(OK, CLOSED)
(Free Voltage)

ALARM SIGNAL
(OK, OPEN)
(Free Voltage)

1~PHASE

EXTERNAL
CONNECTION BOX



AIR CURTAIN 1
(MASTER)



AIR CURTAIN 2
(SLAVE)

POWER SUPPLY

ELECTRICAL

1. Remove the external connection box cover



2. Connect the cables at the electrical elements as the picture shows:

